

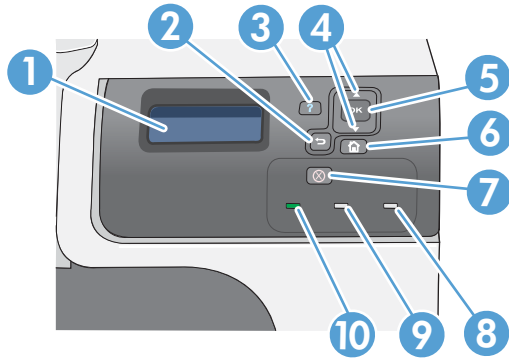





HP Color LaserJet Enterprise CP4020-CP4520 Series Printer



Control-panel layout

The control panel includes a color, graphical and text display, job-control buttons, and three light-emitting diode (LED) status lights.



1	Control panel display	Shows status information, menus, help information, and error messages.
2	↩ Back arrow button	Navigates backward in nested menus.
3	? Help button	Provides detailed information, including animations, about product messages or menus.
4	▲ Up arrow button	Navigates menus and text, and increases the values of numerical items in the display.
	▼ Down arrow button	Navigates menus and text, and decreases the values of numerical items in the display.
5	OK button	Makes selections and resumes printing after continuable errors.
6	🏠 Home button	Opens and closes the menu structure.
7	⊗ Stop button	Halts the current job, presents a choice to resume or cancel the current job, clears paper from the product, and clears any continuable errors that are associated with the halted job. If the product is not printing a job, pressing the Stop button pauses the product.
8	 Attention light	The Attention light indicates that the product has a condition that requires intervention. Examples include an empty paper tray or an error message on the display.
9	 Data light	The Data light indicates that the product is receiving data.
10	 Ready light	The Ready light indicates that the product is ready to begin processing any job.